Ritter®

Installation Instructions

002-0579-XXX-XXX Thermo-form Upholstery Assembly for Model 304

KIT COMPONENTS

Part Number	Description	Qty.
002-0579-XXX-XXX	Upholstery Assy.	1
• 050-3684-XX	Side Drawer Insert	3
• 050-3685-XX	Foot Drawer & Step Insert	3
• 028-0443-XX	Upholstered Exam Top	1
• 028-0439-XX	Upholstered Footrest Pad	1
• 029-0017-XX	Paper Tear Strip	2
• 055-0005-04	Dowel, Paper Roll	1
• 029-2180-00	Fastener Kit	1

REQUIRED TOOLS

Phillips Head Screwdriver

IMPORTANT INFORMATION

Thermo-form upholstery assembly kit allows new upholstery and drawer inserts to be installed easily with either no tools, wing head screws, or just a phillips head screwdriver.

The kit contains all the upholstery, foot and side drawer panel inserts, dowel rod for paper roll, paper tear strips and mounting hardware.

DANGER

Unplug chair from electrical outlet when working on table.

1

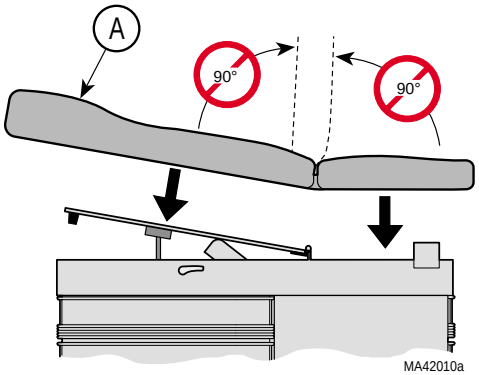

CAUTION

Use care when lifting to prevent personal injury.

EQUIPMENT ALERT

Do **not** fold upholstery **over 90°**.

A. Place upholstery in position.

2

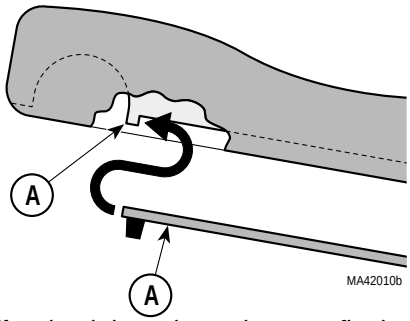

A. ***Align*** back boards so they are flush together.

3

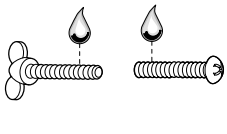

EQUIPMENT ALERT

Before installing, apply a drop of non-permanent thread-lock to upholstery mounting screws to prevent loosening during operation.

NOTE

Additional mounting screws are provided for attaching the upholstery. Discard any screws not used.

4

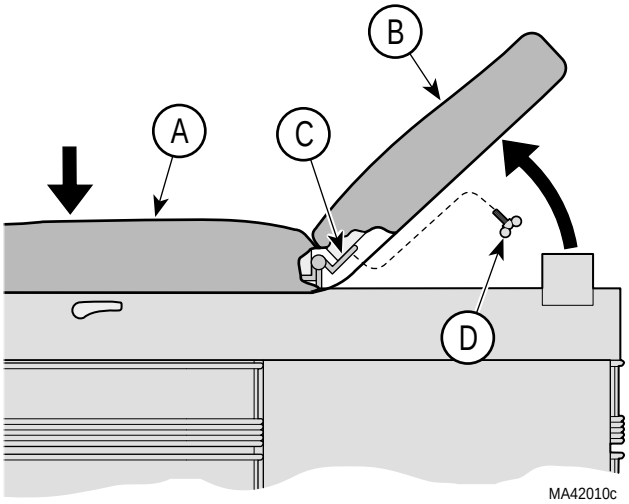

A. Lay backrest flat
B. Lift seat section
C. Align holes in hinge with holes in seat board.
D. Insert two short wing head screws or short phillip head screws.

© Midmark Corporation - 1998

5

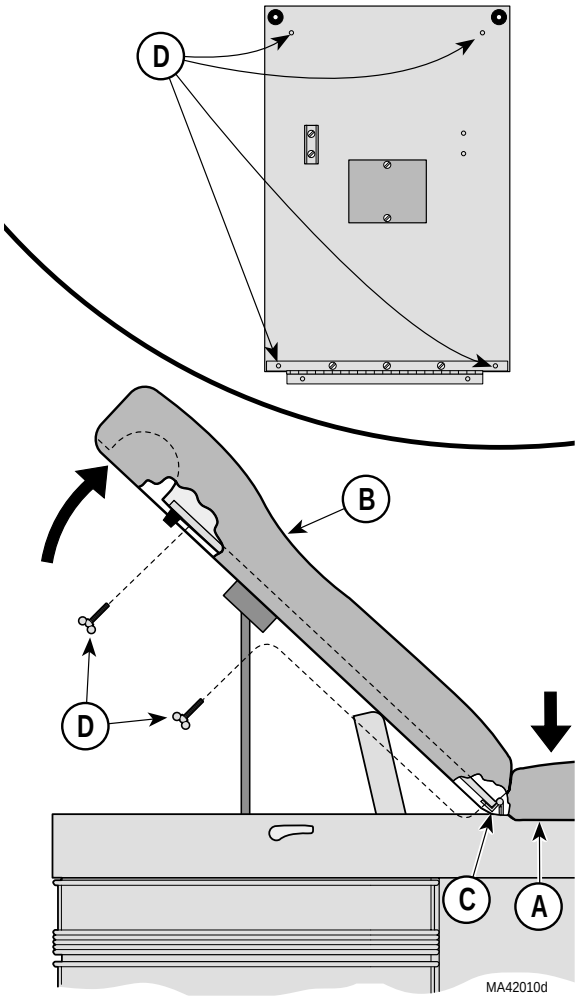

A. Lay seat section flat.
B. Lift backrest to maximum height.
C. Align holes in hinge with holes in backrest.
D. Insert 4 long wing head screws or long phillip head screws.

6

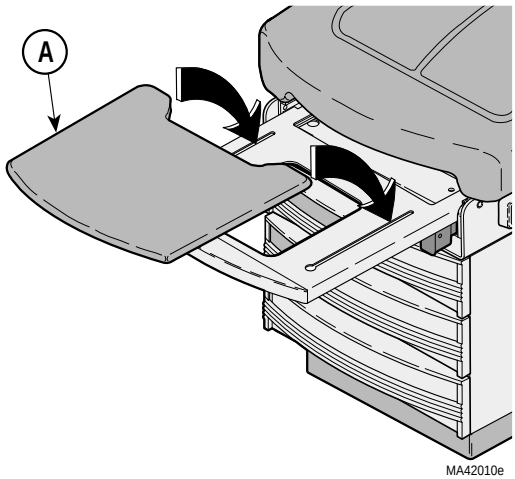

A. Install footrest pad.

7

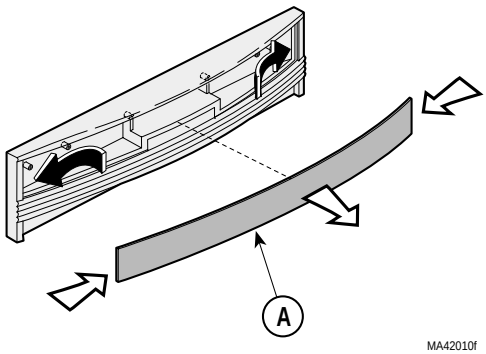

A. Flex inserts, place in position on drawers.

MIDMARK®

Midmark Corporation, Versailles, Ohio 45380 U.S.A.
(937) 526-3662 FAX (937) 526-5542

003-0905-00 Rev. B (8/98)

© Midmark Corporation - 1998